






NOVOFERM ROLLING CODE

Programiranje direktno na prijemu

1. Otvorite prijemu pritisnite tipku na prijemu do LED ne zasvijetli.
2. Zatim pritisnite tipku na daljincu dok LED ne počne treperiti brzo.

Upute za stropne motore:

PRONAĐI 3 TIPKE ZA SINKRONIZIRANJE.	
SINKRONIZACIJA KANALA 1  PRITISNI OKRUGLU TIPKU DOK SE NE POJAVI 1 NA DISPLEJU	 DRŽI PRITISNUTU TIPKU 1 NA DALJINCU DOK NE ZATREPČE TOČKA NA DISPLEJU.
SINKRONIZACIJA KANALA 2.  PRITISNI OKRUGLU TIPKU DOK SE NE POJAVI 2 NA DISPLEJU	 DRŽI PRITISNUTU TIPKU 2 NA DALJINCU DOK NE ZATREPČE TOČKA NA DISPLEJU.

DOVRŠI PROCES PROGRAMIRANJA, PRITISKAJUĆI OKRUGLU TIPKU DOK SE NE POJAVI 0 NA DISPLEJU.

